







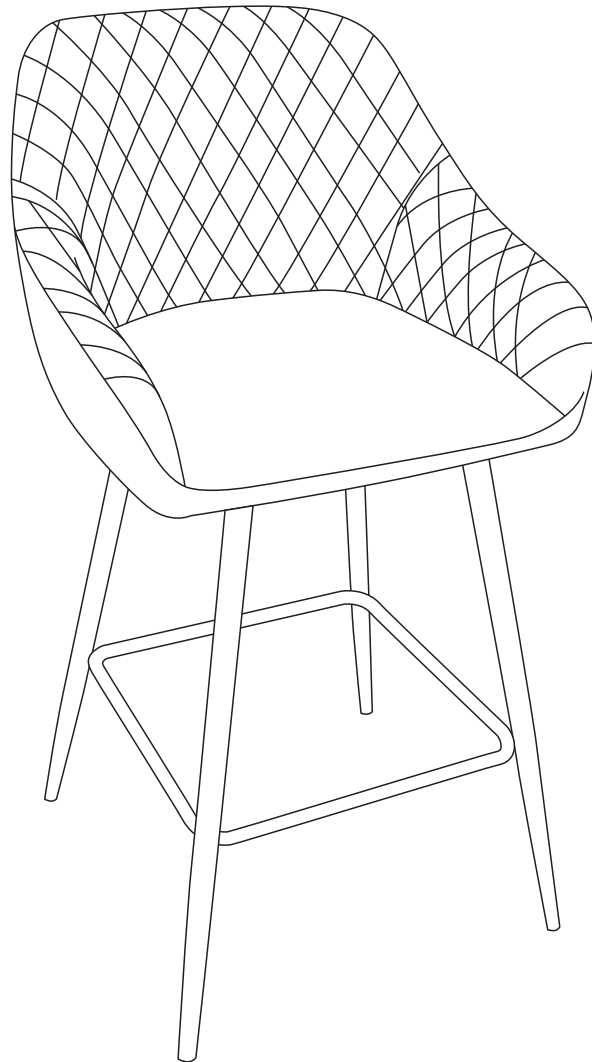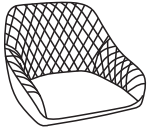



# ASSEMBLY INSTRUCTION

## STYLE 202




<b>A X1</b> 	<b>B X1</b> 	<b>C X1</b> 	<b>D X4</b> 	<b>E X12</b>  M6X20
<b>F X4</b>  M6X25	<b>G X4</b>  Ø 6X16X1.5	<b>H X1</b>  M5		

# 1

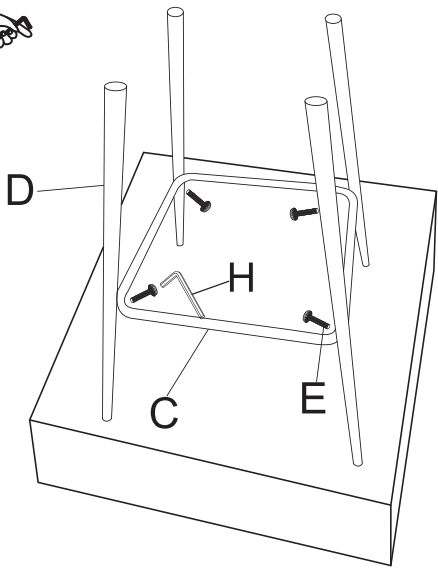


C X1	D X4
EX4	HX1
 M6X20	

# 2

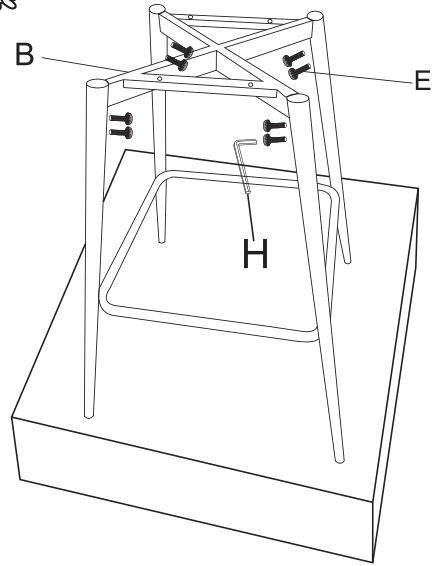

B X1	E X8	HX1
	 M6X20	

# 3

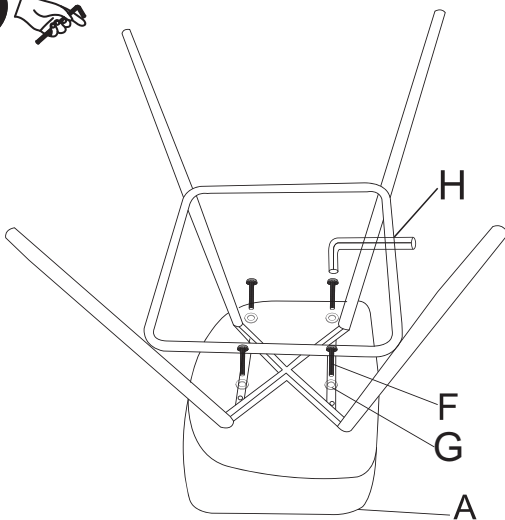

AX1	FX4	GX4	HX1
	 M6X25	 Ø 6X16X1.5	

# 4

